

# MEIKO<sup>®</sup> ACTIVE

## KR 5300

Block detergent, highly alkaline,  
intense bleaching action



- Highly concentrated, guaranteed excellent economy
- Excellent bleaching action
- Incredibly effective at dissolving starches
- Exceptionally effective at dissolving grease
- Remarkably effective cleaning power
- Delivers optimum washing results when used alongside MEIKO ACTIVE rinse aids



MEIKO  
ACTIVE

3,0 kg

**GB** Highly concentrated u  
mercial dishwashers.  
effective against caff  
starchdecomposing p

**DE** Hochkonzentrierter Un  
gewerbliche Geschirr  
insbesondere Kaffein  
besonderer Stärkeabb  
Nur bei medizinischen Notfällen  
+49 (0)761 19240

**FR** Bloc détergeant forte  
industriels. Avec chlor  
dû à la caféine et à la t

**NL** Sterk geconcentreerd  
vaatwasmachines. Me  
koffieen thee aanslag  
eigenschap.

**IT** Detergente a blocchet  
stoviglie professionali  
lo sporco di caffeina e  
decomposizione amidi

**ES** Detergente de bloque  
industriales. Con cloro  
feina y teina. Con prop  
del almidón.

Manténgase fuera del alcanc  
al Servicio Médico de Inform  
Consérvese únicamente en e  
industriales y profesionales. F  
contaminar el mar, lagos y rí

**PL** Wysokoskoncentrowa  
do zmywarek przemys  
szczególnie do zabrud  
właściwościach do usu  
Telefon alarmowy toksykolo

**RU** Высококонцентриро  
очиститель блоков д  
посудомоечных маш  
особенно для пятен  
особыми крахмалоп

**Instructions for use:**

**MEIKO ACTIVE KR 5300** is used with a dosing unit. The dosing is determined by water hardness, wash cycle time, degree of soiling, type of dishwashing machine, type of washware, etc.

**Recommended dosing:**

1.0-2.5 g/l water

**Specific note:**

Not for use on aluminium or other light metals.  
Do not mix with any other products!

**Composition and Detergents Regulation information**

Please see safety data sheet.

**Storage conditions**

Store separately from acids. Store between 0 and 40 °C.

**Safety notice**

For professional use only. For further information and safety notices, see product label and safety data sheet.

**Recommended rinse aids**

MEIKO ACTIVE KS U


MEIKO ACTIVE KS S

MEIKO ACTIVE KS N

MEIKO ACTIVE KS PL (*when washware is primarily made of plastic*)

**Recommended use:**

**Wash cycle time**

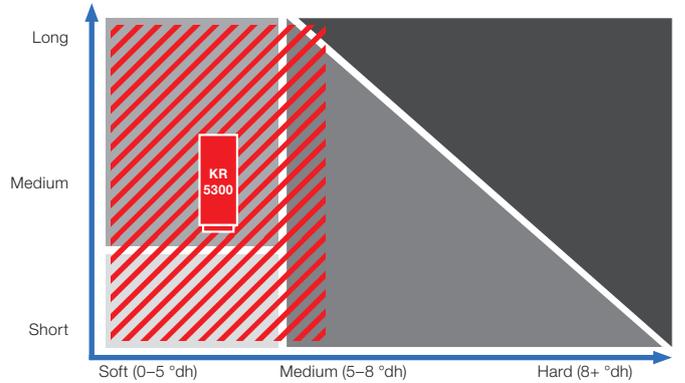

**Dishwashing conditions**



**pH value (undiluted)**



For safety advice please visit:  
<http://m3o.link/A1L>

**Sales unit**

Container 4 x 3.0 kg

**UFI:** 8VW5-PR7F-RQHK-KG6X

